

# USB-P4K



- Make and receive VoIP calls easily
- PC-to-PC, PC-to-Phone operation
- SKYPE ready, share your standard phone with Skype
- Cheap calls

# CONTENTS

## CHAPTER 1 Welcome to USB-P4K

<b>1.1 Summary</b>	<b>3</b>
<b>1.2 Features</b>	<b>3</b>
<b>1.3 System Requirements</b>	<b>3</b>
<b>1.4 Package Contents</b>	<b>3</b>

## CHAPTER 2 Use of USB-P4K

<b>2.1 Run Skype</b>	<b>4</b>
<b>2.2 Connect USB-P4K to PC</b>	<b>5</b>
<b>2.3 Run SkypeMate</b>	<b>5</b>
<b>2.4 Call another Skype user (PC to PC)</b>	<b>5</b>
<b>2.5 Call to regular phone (PC to Phone)</b>	<b>6</b>
<b>2.6 Answer a call</b>	<b>6</b>
<b>2.7 Adjust options (Volume and Ringer)</b>	<b>6</b>
<b>2.8 Function keys</b>	<b>7</b>
<b>2.9 FAQ</b>	<b>7</b>

The information in this document is subject to change without notice and does not represent a commitment on the part of the developer. This document contains materials protected by copyright. All rights are reserved. No part of this manual may be reproduced or transmitted in any form, by any means or for purpose without express written consent.

# CHAPTER 1

## Welcome to USB-P4K

### **1.1 Summary**

USB-P4K is a most effective and easy mode of communication. User can enjoy an Internet phone just as regular phone. It embraces the great convenience and big savings.

### **1.2 Features**

1. PC-to-PC and PC-to-Phone operation
2. Caller ID function of VoIP calls
3. 199 incoming call and 199 dialed number
4. With LCD show
5. Hand-free, redial, flash function
6. Driver built-in, no need additional driver
7. USB1.1 compatible, no need sound card.
8. No external power required
9. Echo cancellation, noise reduction
10. Full duplex communication

### **1.3 System Requirements**

1. PII with 200 MHz CPU or better with USB interface
2. 64MB of RAM
3. 10MB or more hard disk space
4. Operating System: Windows 98/ME/2000/XP
5. Network: LAN, ADSL, ISDN, 33.6K modem or better

### **1.4 Package Contents**

 
1. USB-P4K x1
2. User Guide x1
3. Installation CD x1

# CHAPTER 2


## Use of USB-P4K

### 2.1 Run Skype

- Download Skype software and install it ([www.skype.com](http://www.skype.com)) , the version must be 1.0.0.106 or higher.
- Run Skype and log in with skype account.

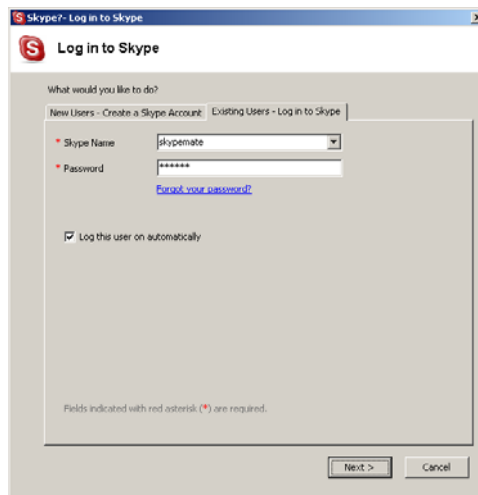

 
You can create a Skype account as below:

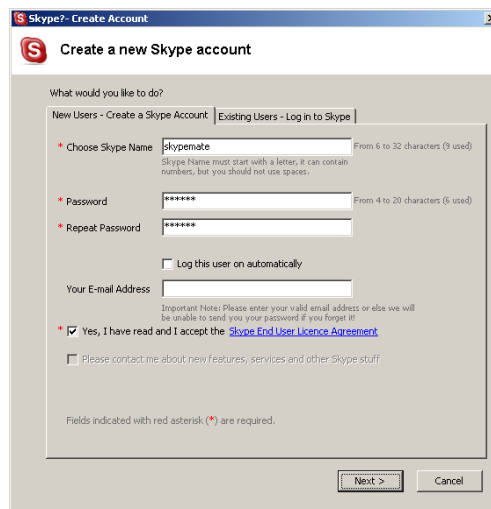

After the software startup, the icon will appear to the system tray as shown below:



That indicates the Skype has successfully connected to Internet. If it hasn't connected to Internet, the icon will be shown as , now you have to check whether PC is connected to Internet successfully or not.


## 2.2 Connect USB-P4K to PC

 - ▣ Connect USB-P4K to your PC, the LCD shows "VOIP- Phone".

## 2.3 Run SkypeMate

- ▣ Insert the SkypeMate Installation CD into CD-ROM, and install it.
- ▣ Run SkypeMate

Double-click the icon  on the desktop, the Skype program will pop up the window as shown below:

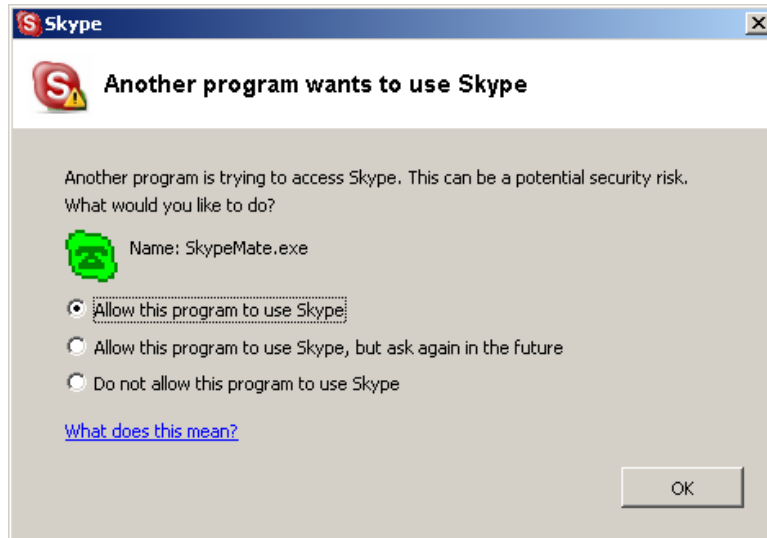

Select the first item "Allow this program to use Skype", click "OK" button.


**Note:** If you selected the wrong item, you can execute "File->Options->Privacy-> Manage other programs' access to Skype->Change->OK" to open the window as above to make another selection.

After running SkypeMate, the icon will appear to the system tray as shown below:




That indicates the device and Skype are connected successfully.

If the icon shown as , please run Skype first.

If the icon shown as , it means USB-P4K connected incorrectly, please reconnect USB-P4K to PC.

## 2.4 Call another Skype user (PC to PC)

 - ▣ Add "skypemate" to Contacts
- ▣ Assign Speed-Dial for it, example "11"

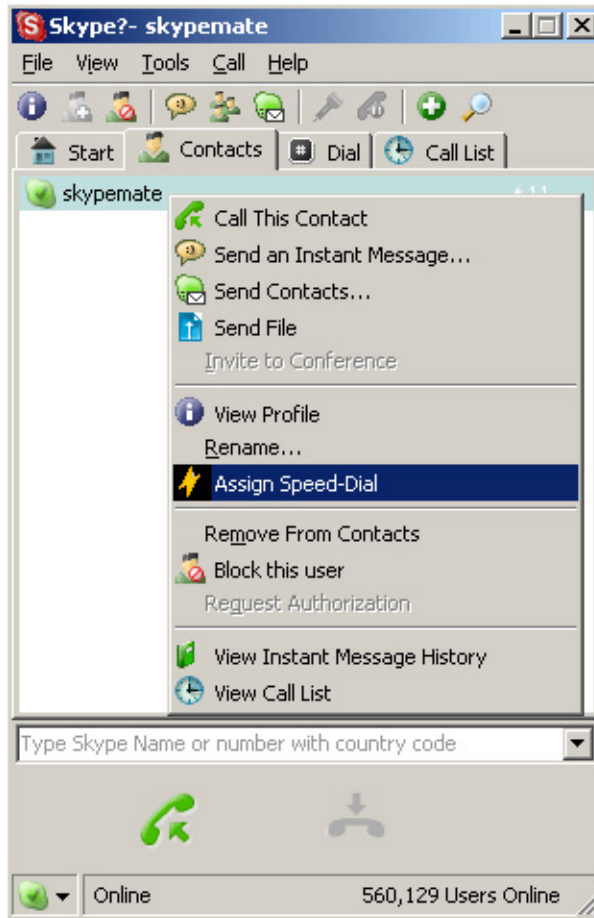

- Input number and call out:  
 Press digital "1" and "1" on USB-P4K, this number will be shown on Skype window, then press SEND key on USB-P4K to call out.

## **2.5 Call to normal phone (PC to Phone)**

Press "00" + "country number" + "phone number", then press SEND key to call out.


Example: Call to China, beijing, press 00861012345678, then press SEND key.

0086	10	12345678
-----	-----	-----
country code	city code	destination number


## **2.6 Answer a call**

When a call in, the USB-P4K is ringing, pick up handset or press handfree key to answer the call.

## **2.7 Adjust options (Volume and Ringer)**

Double click the  on the taskbar, then you can adjust the volume and ringer.

## 2.8 Function keys

- ▣ IN: Caller number review, delete and redial  
You can press “IN” button to review the caller numbers with the time and date. Press “IN” button repeatedly to review the caller numbers from the latest memory to the oldest memory round by round. While you are reviewing, you can double-click “DEL” button to delete this number or press SEND key to call out.
- ▣ OUT: Out number review, delete and redial.  
The usage is similar to “IN” button.
- ▣ UP: Review caller number or out number from oldest to latest.
- ▣ DOWN: Review caller number or out number from latest to oldest.
- ▣ DEL: Delete phone number and the inputted wrong number.
  - (1) Double click to delete caller number or out number.
  - (2) Delete the input wrong number while you are dialing number.
- ▣ DIAL: Call out the number shown on LCD screen.
- ▣ FLASH: Quit all operation of the phone, and make it standby.
- ▣ SEND: Call out the number shown on LCD screen.
- ▣ : handfree key

For example: when you want to make a call by handfree, press handfree key and dial the wanted phone number, then press SEND key to call out. When a call in, you can press handfree key to talking.

 
## 2.9 FAQ

### Problem 1

The voice is played from the PC’s sound card instead of the USB phone when I make/answer a call?

### **Resolution**

Open the Main window of Skype, click on “File->Options”, and go to the table **Hand/headsets**, set **Audio In**, **Audio Out** and **Ringin**g to the **USB Audio Device**.

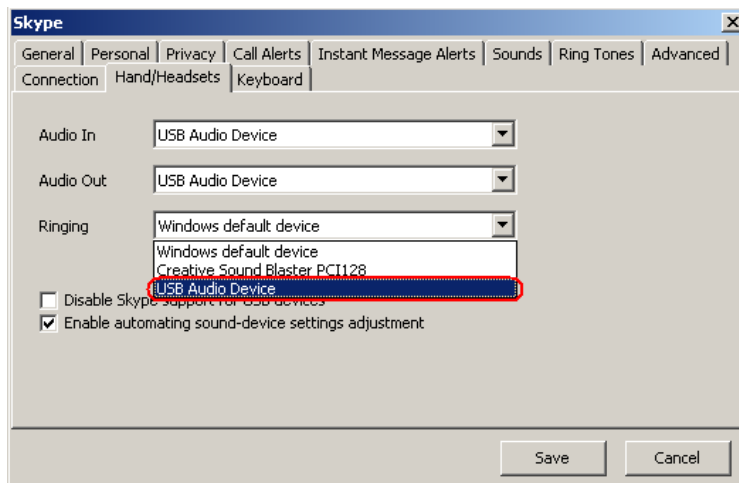


## Problem 2

There is no voice comes out when play music?

### **Resolution**

 Please execute the "Control Panel->Sound and Video (🔊)->Audio", set **Sound Playback** and **Sound Recording**'s Preferred device to your sound card, it shown as below:

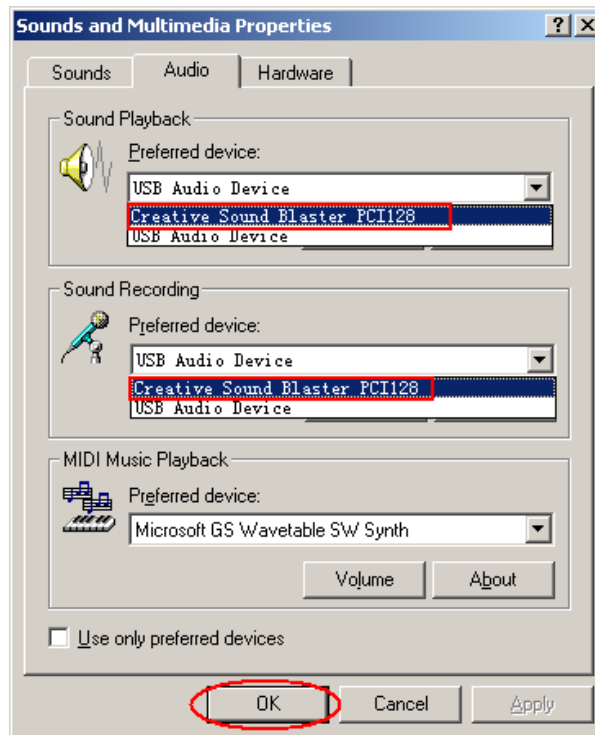


## Problem 3

Skype has been startup, but the icon of SkypeMate still shown as 🟢?

### **Resolution**

 Maybe you selected the wrong item, you can execute "File->Options->Privacy-> Manage other programs' access to Skype->Change->OK" to open the window as below, and make another selection.

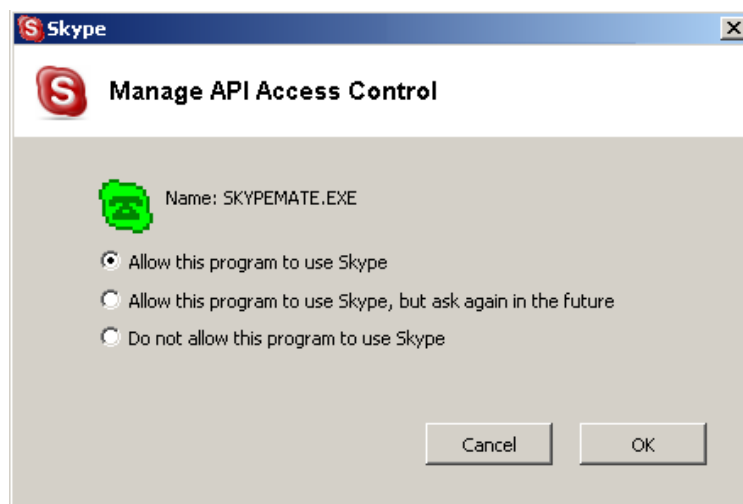


#### **Problem 4**

When you minimize the Skype windows, Skype will exit?

#### **Resolution**

 Execute "File->Options->Hand/Headsets" to open the windows as below:

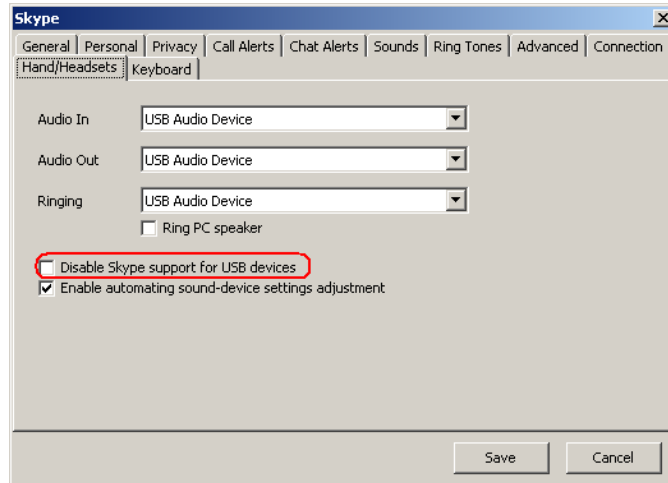

And don't select the check box before "Disable Skype support USB devices".